

power switch and disconnected from the mains for at least two hours.

- This appliance can be used by children over 8 years old, by people with reduced physical, sensory or mental abilities or by inexperienced persons only where they are instructed in advance on its safe use and only if informed of the dangers related to the product. Children must not play with the appliance. The cleaning and maintenance of the appliance may not be done by children without the supervision of an adult. Keep the appliance and the power cable out of the reach of children under 8 years of age when the appliance is on or during the cooling phase.
- Keep all the parts of the packaging out of the reach of children; they are not toys. Keep the plastic bag out of the reach of children: danger of suffocation.
- This appliance is destined exclusively for indoor domestic use. **In order to reduce the risk of accidents, including: fires, electrocution, personal injury and scalding, both during use and during preparation, maintenance and storage, always take the fundamental precautions listed in this manual.**

RISKS CONNECTED TO THE POWER SUPPLY - ELECTROCUTION

- The earthing system and highly sensitive residual-current circuit breaker, complete with magnetothermic cut-out for your domestic system, guarantee safe use of electrical appliances. Therefore, for your own safety, check that the electrical system to which the appliance is connected complies with current laws.
- Do not connect the appliance to the mains if the voltage does not correspond with that of the domestic electrical circuit in use.
- Do not overload the sockets with adaptors and/or transformers. Only connect the product to a single socket with current that is compatible with the supplied plug.

